


H6S 中英文爆炸图 (H6S Spare Parts List)

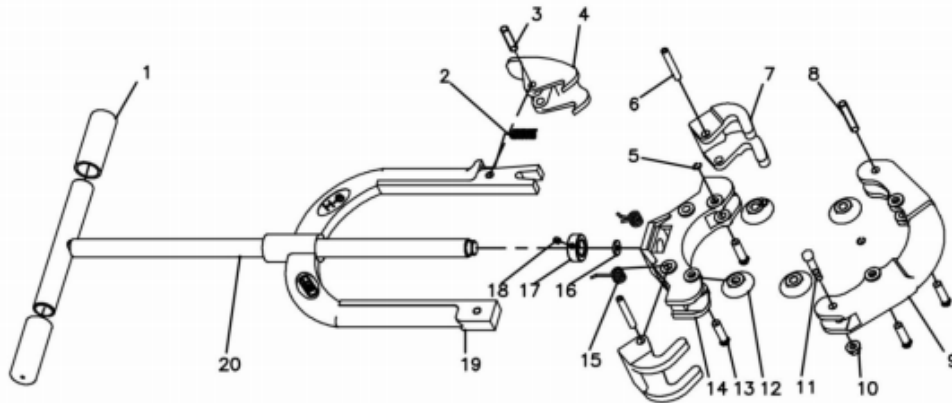

S/N	Ref. No.	品名	Description
1	89222	把手套 (2)	handle grips (2)
2	89119	弹簧	latch spring
3	89123	卡爪销	latch pin
4	89215	卡爪	jaw
5	89221	刀轮销定位卡簧 (4)	ring (4)
6	03027	弹性圆柱销 8*55 (2)	guide pin 8*55 (2)
7	89216	卡管爪 (2)	guide (2)
8	89124	固定滚轮刀架销	lower yoke pin
9	89212	固定滚轮刀架	lower yoke
10	01879	锁紧螺母 M8	locknut M8
11	01230	六角纹制孔用螺栓 M8*45	hinge bolt M8*45
12	89223	割刀片 (4)	cutter wheel (4)
13	89220	刀轮销 (4)	wheel pin (4)
14	89213	移动滚轮刀架	crosshead
15	89218	扭簧	guide spring
16	89219	垫	thrust washer
17	89217	螺母	crosshead locknut
18	01610	开槽锥端紧定螺钉 M8*8 (2)	set screws M8*8 (2)
19	89211	割刀架	upper yoke
20	89214	手柄焊接件	screw handle